



Home About Kyocera Products Promotions **Customer Support** Where To Buy Total Cost of Ownership

Search

- Warranty Registration
- Service Enquiry
- Service Call Logging
- Meter Reading**
To submit a meter reading
- Operational Manuals
- Drivers
- Utilities
- MSDS
- FAQs

KM-1635

Related Links




The KM-1635 uses an **electronic counter** to record the meter readings. This can be viewed on the Operator Panel or printed out in a report.

Use the following steps to view the electronic meter reading or print out the report.

STEP 1 Press the **STOP/CLEAR** button for **3 seconds**. The Copy Count will be displayed on the message display.

STEP 2 Pressing on the **START** button while the Copy Count is displayed will output the Counter Report.

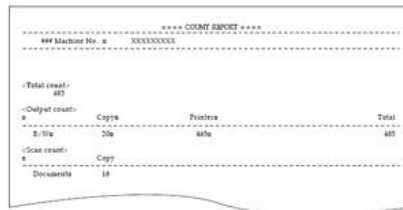

STEP 3 The copier will return to normal Copy mode after the Copy Count has been displayed.

- Global Links**
- [Kyocera Global](#)
 - [Kyocera Solar](#)
 - [Kyocera Wireless](#)
 - [Kyocera Ceramic](#)

Contact us Site map Terms of use Privacy Login

© Kyocera Mita Australia 2004 - 2007