


Print Status Page

Print a status page to check details such as current settings, available memory, and installed optional equipment.

- 1 Press the **Printer** key.
- 2 Press [Printer Menu].
- 3 Press [Print Status Page].

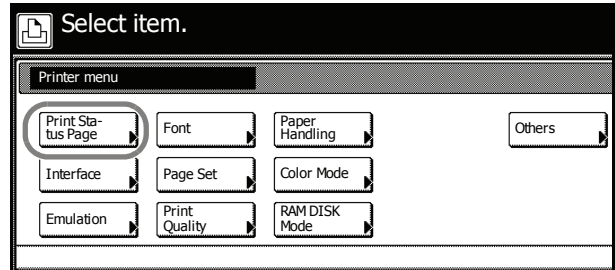

- 4 Press [Printing].
Processing is displayed and the status page is printed.
- 5 When printing is complete, the screen returns to printer mode.